

DESSMANN APP

User Manual

Version 1.2

DESSMANN (China) Machinery & Electronic Co., Ltd.

www.dessmannlock.com

Copyright © 2015-2019 DESSMANN (China) Machinery & Electronic Co., Ltd. All rights reserved

The DESSMANN logo is a registered trademark of DESSMANN (China) Machinery & Electronic Co., Ltd.

The software "DESSMANN" APP contains proprietary information of DESSMANN (China) Machinery & Electronic Co., Ltd.; it is provided under a license agreement containing restrictions on use and disclosure and is also protected by copyright law. Modify, prepare derivative works of, reverse engineer, or otherwise attempt to create source code from the software is prohibited.

Due to continued product development this information may change without notice. The information and intellectual property contained herein is confidential between DESSMANN and the client and remains the exclusive property of DESSMANN (China) Machinery & Electronic Co., Ltd. If having any problems in the documentation, please report them to us in writing. DESSMANN does not warrant that this document is error-free.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written permission of DESSMANN (China) Machinery & Electronic Co., Ltd.

For product consultancy and technical support, please contact us or the local sales representative. Also, visit our web site for more information.

DESSMANN (China) Machinery & Electronic Co., Ltd Website: <u>http://www.dessmannlock.com/</u>

INTRODU	JCTION	01
Overv	/iew	01
Featu	res	01
GETTING	STARTED	
1.1	Download and Install App	02
1.2	Register	02-04
1.3	Login and Logout	05-08
1.4	Add Lock	
1.5	Add Owner Fingerprint	10
1.6	Set Password	
USER MA	NAGEMENT	
2.1	Add User	
2.2	Manage User	
2.3	Delete User	16
UNLOCK	AUTHORIZATION	
3.1	Authorize Temporary Password	
3.2	Authorize Temporary User	
3.3	Manage Temporary User	20
SETTING.		21
4.1	Fingerprints Management	21-23
4.2	Password Management	23
4.3	Wi-Fi Setting	23-24
4.4	Family Setting	24
4.5	Upload Unlocking Record	25
NOTIFICA	TIONS	
5.1	View Notifications	26
5.2	Delete Notifications	26
5.3	Block Notifications	27
UNLOCK.		
6.1	Unlock Methods	
6.2	Access Records	29
ME		
7.1	Modify Profile	
7.2	Block Lock	
LOCK INF	ORMATION	
DELETE LO	ОСК	

Contents

Introduction

Overview

"DESSMANN" APP is a software developed by DESSMANN (China) Machinery & Electronic Co., Ltd., aim to provide user with a more secure and convenient way to access this residential home, to creating high-end and worry-free lifestyle and bringing new and high-quality life to the owners.

Please note that the App is only suitable for DESSMANN App series locks, other standalone models can not applicable to it.

Features

- 1) Enable users to perform unlocking operations on the smartphone;
- 2) Enable owner to add and manage all the lock users with the App;
- 3) Enable owner to authorize and manage temporary user or password;
- 4) Enable owner to check the lock status and access records on the phone;
- 5) Push arrival notification to the user's phone after unlocking.

Getting started

1.1 Download and Installation App

Search and install "DESSMANN" app from the Google Play Store or App Store into your phone.

1.2 Register

DESSMANN App accepts registration via email address and phone number.

내 中国移动 🗢 ॥ 中国移动 🗢 5:26 PM 7 Ö 🔳 4:21 PM **7 Ö** 🔳 < Sign Up Log In Welcome to DESSMANN Welcome to DESSMANN VN > Email Address VN > Email Address Invalid email, please try again Email verification code Send Code Password Forgot password? Password Password requires 6-18 characters Log in with phone number Register with phone number No account? With the registration, the users will be regarded as to agree Sign up now this "User Registration Agreement".

Tap **Sign up now** to start register.

1.2.1 Sign up with email

Fill in all the required fields.

- 1) Tap and Select the Region from the marked area;
- 2) Enter your correct email address;
- 3) Tap **Send Code** and enter the **Graphic Verification** shown in the pop-up frame;
- 4) A verification code will be sent to your email address and enter it on the verification page;
- 5) Type a password and tap **Sign Up.**

내 中国移动 🗢 4:21 PM 🥑 🖉	■) ・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	4:28 PM	4 0 🔳	all中国移动 🗢	4:39 PM	4 0 🔳
<	<	Region		<		
Sign Lin				Ciam Ll	-	
Sign Op	Thailand		TH	Sign U	D	
Welcome to DESSMANN	Vietnam		VN	Welcome to DESSM	IANN	
				Email Address		
VN> Email Address	~			VN> dessman	napp@gmail.co	m ×
Email verification code Send Code	2			Email verificati	on code	Send Code
Password				Password		
Password requires 6-18 characters	*** 			Password requires	6-18 characters	
Sign Up						
Register with phone number				Regist	er with phone nur	mber
With the registration, the users will be regarded as to agree this "User Registration Agreement" .				With the registration this "Us	, the users will be re-	garded as to agree ment".
대] 中国移动 🗢 4:45 PM 🦿 🖉 1	💼 🖬 中国移动 🗢	4:48 PM	40	레 中国移动 🗢	4:58 PM	4 0 🔳
<	<			+		
Sign Lin	Sign I	In		Welcome,	dessman	inapp
Sign Op	Sign C	γ μ		At your service		Find my lock
Graphic Verification	Welcome to DES	SMANN				
according to following figure.	Email Address					
VN mGcx	VN> dessma	annapp@gmail.com	×			
Unclear? Change another one.	Email verification	n code				
Em	8950		Resend Code			
Cancel	Password			No de	wice start to add	lock
Pat	•••••••	•••	× ©	100		
Don	Password requir	es 6-18 characters			Add Lock	
qwertyuio	p					
asdfahiki		Sign Up				
	Reg	ister with phone num	per			
☆ z x c v b n m <	With the registrat	ion, the users will be regar	ded as to agree			
123	1 this "	user Registration Agreeme	ni .	Home	Notifications	O Me

1.2.2 Sign up with phone number

Tap "Register with phone number" and fill in all the required fields.

- 1) Tap and Select the Area Code;
- 2) Enter your correct phone number;
- 3) Tap Send Code and enter the Graphic Verification shown in the pop-up frame;
- 4) A verification code will be sent to your phone and enter it on the verification page;
- 5) Type a password and tap Sign Up.

내 中国移动 🗢 4:21 PM 🧹 🔳	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	utl 中国移动 🗢 5:41 PM 🤜 정 🔳 🖓
<	<	< Area Code
Sign Up	Sign Up	Thailand +66
Welcome to DESSMANN	Welcome to DESSMANN	Vietnam +84
VN> Email Address	+84> Phone Number	
Email verification code Send Code	SMS verification code Send Code	
Password	Password	
Password requires 6-18 characters	Password requires 6-18 characters	
Sign Up	Sign Up	
Register with phone number	Register with email	
With the registration, the users will be regarded as to agree this "User Registration Agreement" .	With the registration, the users will be regarded as to agree this "User Registration Agreement".	
Sign Up Welcome to DESSMANN	Sign Up Ver Graphic Verification Please enter the verification code according to following floure.	Sign Up Welcome to DESSMANN
+84> 123458888 ×	+8· Z	+84> 123458888 × SMS verification code
SMS verification code Send Code	SM	8 3 7 6 Resend Code (38s)
Password	Par Cancel Confirm	Password X @
Password requires 6-18 characters	Done	Password requires 6-18 characters
Sign Up	qwertyuiop asdfghikl	Sign Up
Register with email		Register with email
With the registration, the users will be regarded as to agree this "User Registration Agreement" .	☆ Z X C V D N M X 123 ⊕ ↓ space return	With the registration, the users will be regarded as to agree this "User Registration Agreement".

Note:

- 1) Make sure that your email address and phone number can receive verification email or SMS;
- The verification code is valid within 5 minutes, and you can resend it after every 60 seconds if the valid time is out or you didn't receive the previous one;
- 3) Each email address and phone number can only receive maximum 5 verification codes per day.

1.3 Login and Logout

1.3.1 Log in with email address

- 1) Select the Region;
- 2) Enter your email address;
- 3) Enter your password and Log In.

atl中国移动 🗢 6:40 PM 🦪 🖉 🔲	ull 中国移动 令 く	4:28 PM Region	4 0 🔳	all中国移动 🗢	6:04 PM	4 T 🔳
Log In Welcome to DESSMANN	Thailand Vietnam		TH	Log In Welcome to DES	SMANN	
VN> Email Address				Email Address	annapp@gmail.com	×
Password Forgot password?				Forgot password	?	× @
Log In					Log In	
Log in with phone number				Log	g in with phone number	
No account? Sign up now					No account? Sign up now	

1.3.2 Log in with phone number

- 1) Tap Log with phone number to switch the Login mode;
- 2) Select the Area Code;
- 3) Enter your phone number;
- 4) Enter your password and Log In.

ull中国時初 や 6:22 PM イ ジ ■ご Log In Welcome to DESSMARY	・41 中国時頃 や 6:13 PM イモーン Log In Welcome to DESEMAIN	*#1中田時泊 や S:41 PM く Area Code Thailand Vietnam	+66 +68 +84 Welcome to DESEMANE
VN> Email Address	+84> Phone Number		Phane Number +84 > 123458888 ×
Password	Password		Paseword × ©
Forgot password?	Forgot password?		Forgot password?
Log In	Log In		Log In
Log in with phone number	Log in with email		Log in with email
No account? Sign up now	No account? Sign up now		No account? Sign up now

1.3.3 Forgot password

Tap Forgot password to set new password and fill in all the required fields.

- 1) Select Region or Area Code;
- 2) Enter registered email address or phone number;
- 3) Tap Send Code and enter the Graphic Verification;
- 4) Enter the received verification code;
- 5) Enter a new password and Confirm.

Forgot Email Account Password

ell中国移动 🗢 6:40 PM 🤜 🖉 🔳	ell 中国移动 🗢 6:46 PM 🛛 🕫 🔳	ell 中国移动 🗢 4:28 PM 🦪 정 🔳
	<	< Region
a. a		
Log In	Forgot Password	Thailand TH
Welcome to DESSMANN	Welcome to DESSMANN	Vietnam VN
VN > Email Address	VN> Email Address	
Password	Invalid email, please try again	
Eccept assessment?	Email verification code Send Code	
roigur pasawulur		
Login	New Password	
	Password requires 6-18 characters	
Log in with phone number		
	Confirm	
	Commit	
No account? Sign up now		
etil 中国移动 🗢 6:54 PM 🦪 정 💽	atl 中国移动 🗢 6:52 PM 7 🛛 🗨	ell中国移动 🗢 6:57 PM 🧐 🖉 🔳
<	<	<
Forget Decoward	Forget Decoward	Forget Decoword
Forgot Password	Forgot Password	Forgot Password
Welcome to DESSMANN	Graphic Verification	Welcome to DESSMANN
Email Address	Please enter the verification code according to following figure.	Email Address
VN> dessmannapp@gmail.com ×	VN 35tF ×	VN> dessmannapp@gmail.com ×
	Unclear? Change another one.	Email verification code
Email verification code Send Code	Em	9 6 4 0 Resend Code (2s)
		Password
New Password	Ne Cancel Confirm	••••••• × •
Password requires 6-18 characters	Done	Password requires 6-18 characters
Confirm	qwertyuiop	Confirm
	asd f g h j k l	
	☆ z x c v b n m ⊗	
	123 🌐 🔮 space return	

Forgot Phone Number Account Password



1.3.4 Log Out Tap Log Out and Confirm.

내 中国移动 🗢	8:12 PM	7 Ö 🔲	•••• 中国移动	Ŷ	8:11 PM	P	ΰ 💽
	123458888				123458888		
My Lock Account and Se	curity	>	My Lock	Log out t can sti Canc	Tips will not delete any data Il log in with this accor cel Confi	a. You unt. irm	>
DESSMANN (I Copyright@20	V1.2.3 China) Machinery & Electro 15-2019 DESSMANN All rig Otifications	nic Co., Ltd. hts reserved Me	DESS Copyr Home	MANN (Cl ight©2016	V1.2.3 nina) Machinery & Electro i-2019 DESSMANN All rig O Notifications	nic Co., Ltd hts reserve	

1.4 Add Lock

- 1) Tap 🖶 or "Add lock";
- 2) Scan the QR code on the battery cover;
- 3) Enter lock name, the name can be modified if needed;
- 4) Tap **Understood** and follow the instructions.



Add Lock

- Open the APP, Click "+" Button

1.4.1 Modify Lock Name

- 1) Tap * to enter the Lock Details page;
- 2) Tap More to enter the Setting page;
- 3) Tap Lock Name to Modify Lock Name Page;
- 4) Modify the name and tap **Confirm**.

배中国移动 🗢 10:00 AM 🦪 🖝 🔿	・III 中国移动 🗢 10:08 AM イ び 🔳	■山中国移动 🗢 10:11 AM 17 0 ■)	🗤 1 中国移动 🗢 10:16 AM イ び 🔳 🤇
+	< Lock Details More	< Setting	< Lock Name
Welcome, 123458888	• •	WiFi Setting >	Lock Name TEST LOCK
At your service		Fingerprints Management >	Confirm
		Unlock Password >	
Click to unlock	Fingerprint Lock	Family Setting >	
	B b	Lock Name Fingerprint Lock	
	Lock Users Unlock Authorization	Lock Information >	
	Today 05-23 Thursday	Upload unlocking record	
			Enter lock name Done
	-Bi	Delete Lock	qwertyuiop
	No record		asdfghjkl
			☆ z x c v b n m ⊗
Home Notifications Me			123 🌐 🖗 space return

1.5 Add Owner Fingerprint

After added the lock, the app will automatically enter the **Add Fingerprint** page.

- 1) Tap Start Recording;
- 2) Tap Understood and follow the instructions;
- 3) Record the fingerprint;
- 4) Type fingerprint name and tap Confirm.



1.6 Set Password

Enter password and **Save**. The password can be modified on the **Setting** page if needed.



1.6.1 Modify Password

- 1) Tap Unlock Password on the Setting page;
- 2) Choose Lock Password;
- 3) Enter 6 digits new password and tap Save;
- 4) click **Understood** to follow the instructions.



USER MANAGEMENT

2.1 Add User

The owner or administrator can add new user. Once added, this account will be sync to the server.

Note:

- 1) If the account already registered, the lock will be showed on the home screen after login;
- 2) If the account hasn't registered yet, the new user needs to set new password by tap "Forgot password?" to login.

2.1.1 Add new user from contacts

- 1) Tap * to enter the Lock Details page;
- 2) Tap Lock Users to enter the Users Management page;
- 3) Tap Add new user;
- 4) Select the user from contacts and Confirm.



2.1.2 Manually add new user

- 1) Tap 🌞 to enter the Lock Details page;
- 2) Tap Lock users to enter the Users Management page;
- 3) Tap Add new user;
- 4) Tap Add other users;

5) Manually enter the phone number or email and Confirm.



2.2 Manage User

2.2.1 Manage User Permissions

The new added users are common user, they cannot access to setting function to manage the lock and other users, they can only use the account to open the lock.

If the accounts need to access the setting functions, the owner can set them as Administrators by turn on the **Senior management** button to authorize them permissions.

- 1) Tap Lock Users on the Lock Details page to enter the Users Management page;
- 2) Choose the account to manage its permissions;
- 3) Turn on the **Senior management** button to set the account as administrator.



2.2.2 Manage Uses Time Setting Mode

With the App, you can set some specified time periods for some special users, such as nanny, renter, etc.

- 1) Tap Lock Users on the Lock Details page to enter the Users Management page;
- 2) Tap Lock Users to enter the Users Management page;
- 3) Choose the account and tap Time setting mode;
- 4) Customize the time period and tap **Confirm**.



2.3 Delete User

- 1) Tap Lock Users on the Lock Details page to enter the Users Management page;
- 2) Choose the account;
- 3) Tap Delete.

비 中国移动 🗢	10:08 AM	√ ö ■	all 中国移动	Ŷ	2:06 PM	1 Ö 💽	山中国移动 令	2:06 PM	4 Ö 🔲
<	Lock Details	More	<	Usei	rs Management		<	Test Account 1	
		8 💿	123458 xiangxinke	388 Own @163.com	er	>	Name		Test Account 1
			Test Acc dessmanna	ount 2 /	Administrator m	>	Account Time setting r	dessma	All day mode
	Fingerprint Lock		Test Acc dessmanna	ount 1	com	>	Senior manag	ement	\bigcirc
Lock Us	ers Unlock Au	thorization						Delete	
Today 05-2	3 Thursday								
	No record								
					Add new user				

UNLOCK AUTHORIZATION

3.1 Authorize Temporary Password

When you have a friend come by and you are not in the home, you can authorize him/her a one-time temporary password to enter your house.

- 1) Tap Unlock Authorization on Lock Details page, then choose Authorize temporary password;
- 2) You need to **Generate password** when first use, or the temporary passwords run out or insufficient. Tap **Generate password**, and then tap **Understood** to follow the instructions, each time you will get 10 set of temporary passwords;
- 3) Send the temporary password to you friends by SMS, or you can copy the text and send it by communication software.



Note:

- 1) Generate password should close to the door within one meter, and need to press and hold the Bluetooth Setting Button on the inner panel;
- 2) Don't reveal the temporary password to others;
- 3) You can also generate temporary password at lock Setting page.



3.2 Authorize Temporary User

3.2.1 Authorize Temporary User from Contacts

- 1) Tap Unlock Authorization on the Lock Details page;
- 2) Choose Authorize temporary user;
- 3) Select the temporary user from contacts;
- 4) Set the time period and tap Confirm.

•••II中国移动 夺 10:08 AM	70 🔳	내)中国移动 🗢 2:12 PM	4 0 📭	© %al Bi ~ Ø \$20,34% m⊃ 17:05	III #⊿d RB ~ 17:11
< Lock Details	More	< Unlock Authorization		< Authorized temporary user	< Time setting
	0 0	Authorize temporary password	>	Q. Search contacts	Authorize temperary effective time
	6	Authorized temporary user	>	12345678910	Custom time setting
		Manage temporary users	>		Start date Select start date
Fingerprint Lock					End date Select end date
æ	6				Start time Select start time
Lock Users Unio	ck Authorization				End time Select end time
Today 05-23 Thursday					Repeat period Select repeat period
					Confirm
No record					
				Confirm	
				Add other users	

Note: You cannot add exist account as new user.

3.2.2 Manually Add Temporary User

- 1) Tap Unlock Authorization on the Lock Details page;
- 2) Choose Authorize temporary user;
- 3) Tap Add other users;
- 4) Manually enter the phone number or email;
- 5) Set the time period and tap **Confirm**.



Note: You cannot add exist account as new user.

3.3 Manage Temporary User

- 1) Tap Unlock Authorization on the Lock Details page;
- 2) Choose Manage temporary users to enter the temporary users list;
- 3) Choose the temporary user on the list;
- 4) Modify its time period or delete this user.



SETTING

Tap * and then tap **More** to enter the **Setting** page.



4.1 Fingerprints Management

4.1.1 Enter the management page

Tap Fingerprints Management on the setting page;

u山中国移动 夺	10:11 AM	4 Ö 🔳	all 中国移动	ð 🗢	3:18 PM	7 0 💼 4
<	Setting		<	Finge	erprints Management	•••
			123458	888		
WiFi Setting		>	E in an an			
			Fingerp	rinti		~
Fingerprints Manag	ement	>				
Unlock Password		>				
Family Setting		>				
Lock Name	Fin	gerprint Lock >				
Lock Information		>				
Upload unlocking re	ecord	\bigcirc				
D	elete Lock					

4.1.2 Add Fingerprint

- 1) Tap ..., then choose Add Fingerprint;
- 2) Select the user from the exist user list;
- 3) Tap Start recording, and tap Understood to follow the instructions;
- 4) Record fingerprint;

5) Type fingerprint name and **Confirm**.



4.1.3 Edit Fingerprint

- 1) Choose the fingerprint from the list to enter Edit Fingerprint page;
- 2) Edit the name or Delete Fingerprint;



4.2 Password Management

Tap **Unlock Password** to enter the password management page, on this page you can modify your regular unlock password and get temporary password for one-time use.

4.3 Wi-Fi Setting

Note: Wi-Fi setting is very important for Notifications, fail to set the Wi-Fi connection will lead to the missing of some arrival notifications.

4.3.1 Set Wi-Fi

- 1) Tap Wi-Fi Setting on Setting page;
- 2) Enter correct Wi-Fi Name and Password, then tap Complete;
- 3) Tap **Understood** to follow the instructions.

ছা জ 14:26 ✔ Setting	* 💷	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	2:29 PM WiFi Setting	48.	ndi中国移动 令 く	2:29 PM WiFi Setting	4 ö 🔳
WiFi Setting	>	Set WiFi to conne WiFi Name	et lock	Network	Set WiFi to conne WiFi Name G	ect lock	Network
Fingerprints Management	>	WiFi Password	12345678	ø	WiFi Password	•••••	ø
Unlock Password	>	Wi-Fi			Wi-Fi	Within	
Family Setting	>	WiFi is off, lock d	sconnected	-	WiFi is Bluetooth setting- button	one meter	
Lock Name	Fingerprint Lock 🗦		Complete				
Lock Information	>		Detect WiFi		Pret	ss bluetooth setting butto till the front indicator on.	
Upload unlocking record					Make s	Understood	is on.
Delete Lock							

4.3.2 Detect Wi-Fi

Make sure to **Detect Wi-Fi** after Wi-Fi setting completed, you will receive a notification if the Wi-Fi connecting correctly. If you cannot receive the notification, you need to check and try again.

1) Tap Detect Wi-Fi and click Understood to follow the instructions;

2) You will receive one notification if the Wi-Fi connecting correctly.

山川中国移动 🗢	2:29 PM	₹ Q ■)·	ull中国移动 🗢	4:03 PM	7 0 🛑 4	all 中国移动 🗢	4:02 PM	I O 🛑 4
<	WiFi Setting		<	WiFi Setting		<	WiFi Setting	
Set WiFi to conn	ect lock		Set WiFi to conne	ect lock		Set WiFi to conne	ect lock	
WiFi Name G	uest	Network	WiFi Name G	uest	Network	WiFi Name G	uest	Network
WiFi Password	12345678	8	WiFi Password	•••••	ø	WiFi Password	•••••	0
Wi-Fi WiFi is off, lock c	Esconnected Complete Detect WiFi		Wi-Fi WiFi is Bluetoot setting button Pres ti Make su	s bluetooth setting buttor ill the front indicator on. ure your phone bluetooth I Understood	s on.	Wi-Fi WiFi is off, lock d	Isconnected Notification 8888, your lock (TEST LG Fl connection detecting is successful. Understood	pock)

4.4 Family Setting

The Family Setting function is enabled by default, and the family members can receive the arrival notifications of all the family members. You can block the name from the list if you don't want to receive someone's notifications.

1) Tap Family Setting to set.



4.5 Upload Unlocking Record

Turn on the button to upload your unlocking record, the server will send these unlock information to users' App if the lock is connected to the Wi-Fi correctly and the family setting is on.

- 1) Tap Upload unlocking record on the Setting page;
- 2) Tap **Understood** to follow the instructions.

E 🕾	14:26	* =->	₩1中国移动 🗢	3:04 PM	4 Q 🔳	6	15:09	* 💷	
<	Setting		<	Setting		<	Setting		
WiFi Setting		>	WiFi Setting		>	WiFi Setting		>	
Fingerprints Manag	gement	>	Fingerprints	Management		Fingerprints N	Management	>	
Unlock Password		>	Unloc	Within	>	Unlock Passv	vord	>	
Family Setting		>	Family	coth	>	Family Setting	J	>	
			Lock t	ing and ton	ock >				
Lock Name		Fingerprint Lock 🗦				Lock Name		Fingerprint Lock >	
Lock Information		>	Lock I P	till the front indicator or	ton	Lock Informa	tion	>	
Upload unlocking record			Uploa			Upload unlocking record			
			-	Understood		L			
Delete Lock				Delete LOCK			Delete Lock		

Notifications

The notifications include Unlocking notice, Alarms, Error events, and WIFI Detection feedbacks of your lock.

Notice: In order to receive the notifications, please make sure:

- 1) Your lock Wi-Fi setting is successful;
- 2) The Upload unlocking record button is on;
- 3) "DESSMANN" have got your permission to send the notifications.

5.1 View notifications:

1) Tap Notification to view the details.

5.2 Delete Notifications:

- 1) Swipe left to delete one single notification.
- 2) Tap ... on the Notification screen, then choose Clear history record and Confirm.



5.3 Block Notifications:

1) Tap on the **Notification** screen;

- 2) Choose Push notification setting;
- 3) Tap **Push Notification (**.

Note: You can turn on the button to receive the notifications later if needed.



UNLOCK

6.1 Unlock Methods

Beside the traditional way of unlocking by fingerprint or password, now you can unlock your door with DESSMANN APP through phone Bluetooth or by authorizing temporary user or password.

- 1) Fingerprint;
- 2) Password;
- 3) DESSMANN App (Phone BLE, Authorized Unlocking).

6.1.1 Click to unlock

Make sure your phone Bluetooth is on and that you are in range of your lock.

- 1) Close to the lock within one meter;
- 2) Touch the indictor on the front panel to wake up the lock Bluetooth;
- 3) Click the lock frame on the home screen;
- 4) Press downward handle to open the door when you hear the motor working sound.



6.1.2 Find my lock to unlock

This function can be applied when you added many locks on your App and you forgot the specific name of the lock.

- 1) Close to the lock within one meter;
- 2) Touch the indicator on the front panel to wake up the lock Bluetooth;
- 3) Tap Find my lock, and the app will match with the wake-up lock;
- 4) Tap the frame of the found lock and then press downward handle to open the door.



6.2 Access Records

The access records will be showed both on Notifications Screen and Lock Details Page.



ME

7.1 Modify Profile

- 1) Tap the portrait icon;
- 2) Choose 'Profile photo' to select photo from album or taking a new one;
- 3) Choose 'Name' to enter lock name and tap Confirm.



7.2 Block Lock

Click '**My lock**', you can find a list of all added locks. Turn off the button, the lock will not be displayed on the **Home** screen.



Lock Information

Tap Lock Information on the Setting page to view the status of the lock. Note:

- 1) Only the lock owner or administrator can view the information, common or temporary user cannot check it;
- 2) Tap **Firmware Version Detection** on this page to detect whether there is a latest firmware version.



Delete Lock

Please note that Deleting lock will erase all the data on the server as well as on the lock.

- 1) Tap Delete Lock on the lock Setting page;
- 2) Tap Confirm;
- 3) Tap Understood to follow the instructions.

