

No need for APP locks

 \emptyset 12.0

510/710/800/810/811 Lock Marker Version:A2

Attention:
To avoid the screw holes have deviation, please insert mortise after drilling the strike plate grooves, and then drilling the holes of screws according to actual

←24.5→



No need for APP locks

 \emptyset 12.0

.Front Panel Assembly .Panel Connector Nuts $\mathrm{ST4} \times 25 \mathrm{mm}$ SS Countersunk Screw (Wood Door) $\mathrm{M5} \times 12 \mathrm{mm}$ SS Countersunk Screw (Other Door) Installation Instruction

10/800/810

Spindle Spring


Mortise Motor Wire Cylinder Tailpiece


13.Extended Panel Fastening Screw14.Back Panel Assembly15.Power Wire Socket 16.Thumb Turn Tailpiece 17.Spindle Spring

18.Back Panel Square Spindle
19.Extended M5 Countersunk Screw
20.M5×12mm Countersunk Screw
21.AA Battery 23.Handle Reversing Mechanism

Note:Before installation, please reconfirm if the mortise is consistent with the demands of door lock (mortise screw direction, mortise spring bolt direction and shifting block direction), then proceed to next installation step.

Reminder: All diagrams here are for reference only, specifications are subject to the physical product.

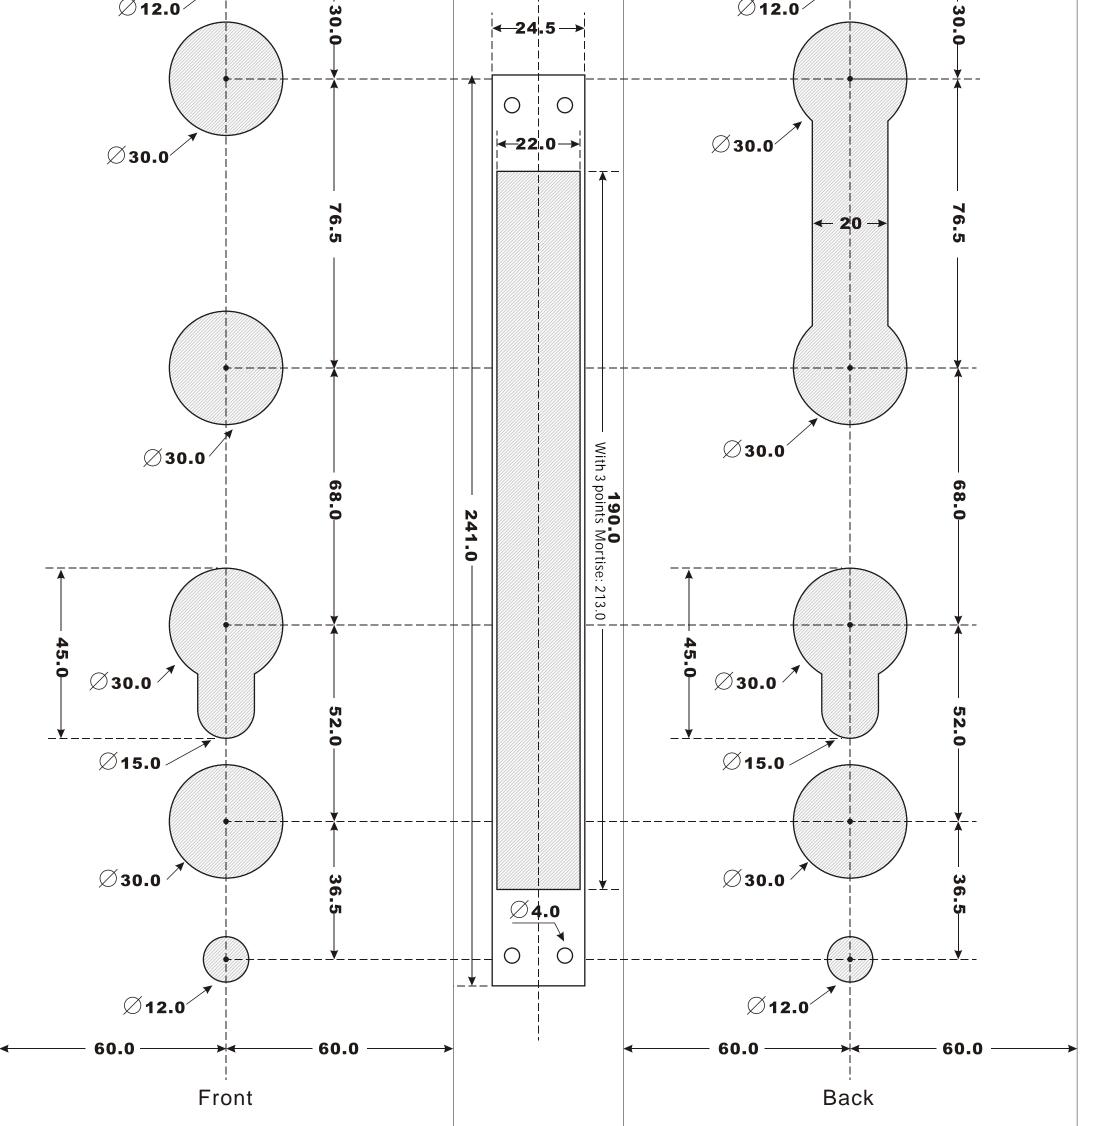

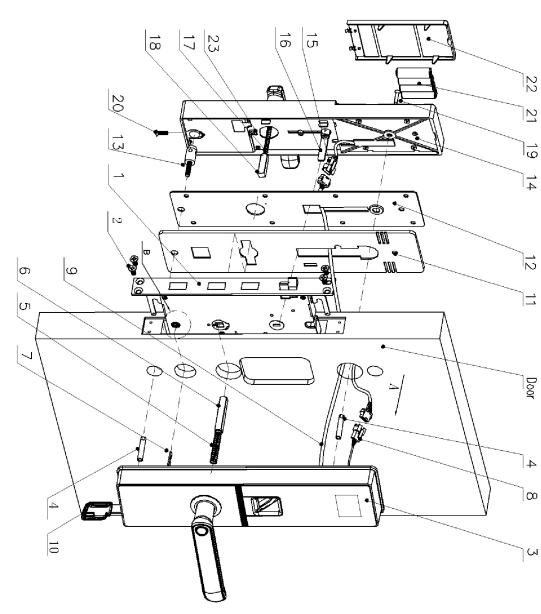

Installation Instruction

1.Lock Mortise
2.ST4×25mm SS Countersunk Screw (Wood Door)
M5×12mm SS Countersunk Screw (Other Door)
3.Panel Connector Nuts
4.Spindle Spring
5.Square Spindle
6.Front Panel Assembly
7.Fixed Plate

8.Panel Fastening Screw
9.Extended M5 SS Countersunk Screw
10.M5×12mm SS Countersunk Screw
11.Back Panel Assembly



Reminder: All diagrams here are for reference only, specifications are subject to the physical product.

